

systemgaz.com.pl

części zamienne do kotłów, palników, automatyka HVAC
sprzedaż wysyłkowa



BRAHMA
components and systems for heating

E6G ... Brahma




Description: Gas solenoid valves

Characteristics: with 1/4 or 3/8 connections, with a flow rate up to 3,9 m³/h, operating pressure up to 1bar

System Gaz dystrybutor Brahma Spa. w Polsce
Polska 04-549 Warszawa, Korkowa 167, tel.fax. +480 22 812-05-04
sprzedaż wysyłkowa [http:// www.systemgaz.com.pl](http://www.systemgaz.com.pl)
e-mail: systemgaz@hoga.pl

E6G*... SERIES

SOLENOID GAS VALVES WITH 1/4" AND 3/8" CONNECTIONS AND OPERATING PRESSURE UP TO 1bar

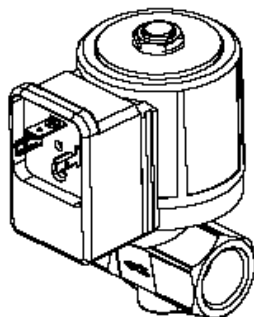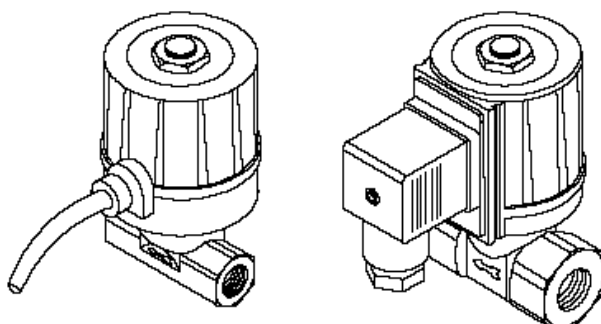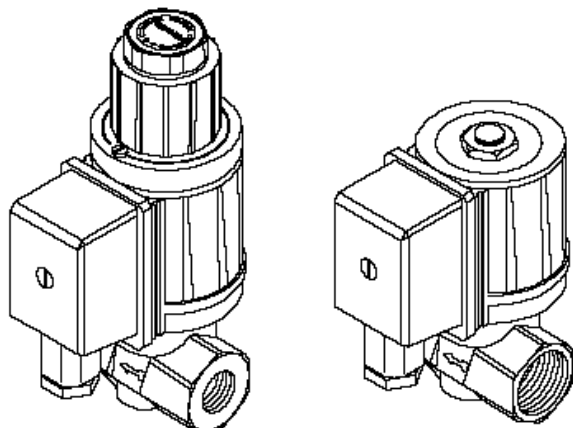

GENERAL DESCRIPTION

This series of solenoid valves are of normally closed type, suitable for civil and industrial applications, supplied with alternate or direct current. These valves are divided into two groups: with 8 mm or 10 mm orifice.

Gas valves, marked with "S" or "L" after type reference, have coil operating in direct current, which permitted to make its actions as silent as possible.

There is the possibility to have valves provided with inlet pressure plug or outlet pressure plug (excluding G1/4" connection ones) and, 10 mm orifice only, valves equipped with hydraulic lag group, which permits slow opening; in this case it is also possible to have a quick and adjustable opening initial flow.

Gas valves of this series, conforming to EN161, have a CE type Certificate (CE Reg. N° 63AQ0626) in accordance to European Directives 90/396 and 93/68.

TECHNICAL FEATURES

| | |
|------------------------|--|
| Class: | A |
| Group: | 2 |
| Supply voltage (1): | 230 Vac / 50-60 Hz 110 Vac / 50-60 Hz |
| Operating temperature: | -10°C / +60°C |
| Closing time: | ≤ 1s |
| Opening time: | ≤ 1s (quick opening versions only) |
| Mounting: | vertical and horizontal |
| Body: | die-cast brass |

(1) Versions with different supply voltages are available.

INSTALLATION

- Respect the applicable national and European standards (e.g. EN60335-1) regarding electrical safety.
- Assemble the valve to the installation so that the arrow on the valve body has the same direction as the fuel flow.
- During the assembly of the valve to the installation piping, avoid twisting on the sheath and always use an hexagonal key to be fitted to the valve body.
- Make sure that no foreign matters have entered the valve body.
- Make sure that the max. fuel input pressure never exceeds the value appearing on the label.

DIRECTIONS FOR E6G*L... VALVES ADJUSTMENT

Flow adjustment

To adjust the gas flow, you have to remove one of the two screws used to fasten the lag group (the not enamelled one, marked with 4 in Fig.1) and rotate clockwise the whole group to reduce the flow or in the opposite direction to increase it.

Opening time adjustment

After removing the top protection, by rotating it counterclockwise, you have to act on the adjustment screw, marked with 1 in Fig.1; by rotating clockwise, the opening time becomes longer, by rotating in the opposite direction, the opening time becomes shorter.

Quick release initial flow adjustment

After removing the top protection by rotating it counterclockwise, if you rotate clockwise the nut marked with 2 in Fig.1, the initial release will be reduced; if you rotate the same nut counterclockwise, the initial release will be increased.

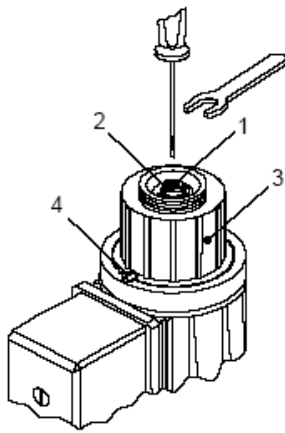


Fig. 1

DIRECTIONS FOR E6G*SR... VALVES ADJUSTMENT

Flow adjustment

Rotate clockwise the screw marked with 1 in Fig.2 to reduce the flow, rotate in the opposite direction to increase the same.


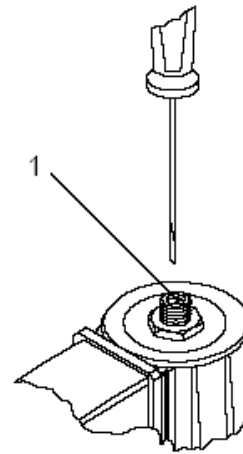



Fig. 2

OVERALL DIMENSIONS

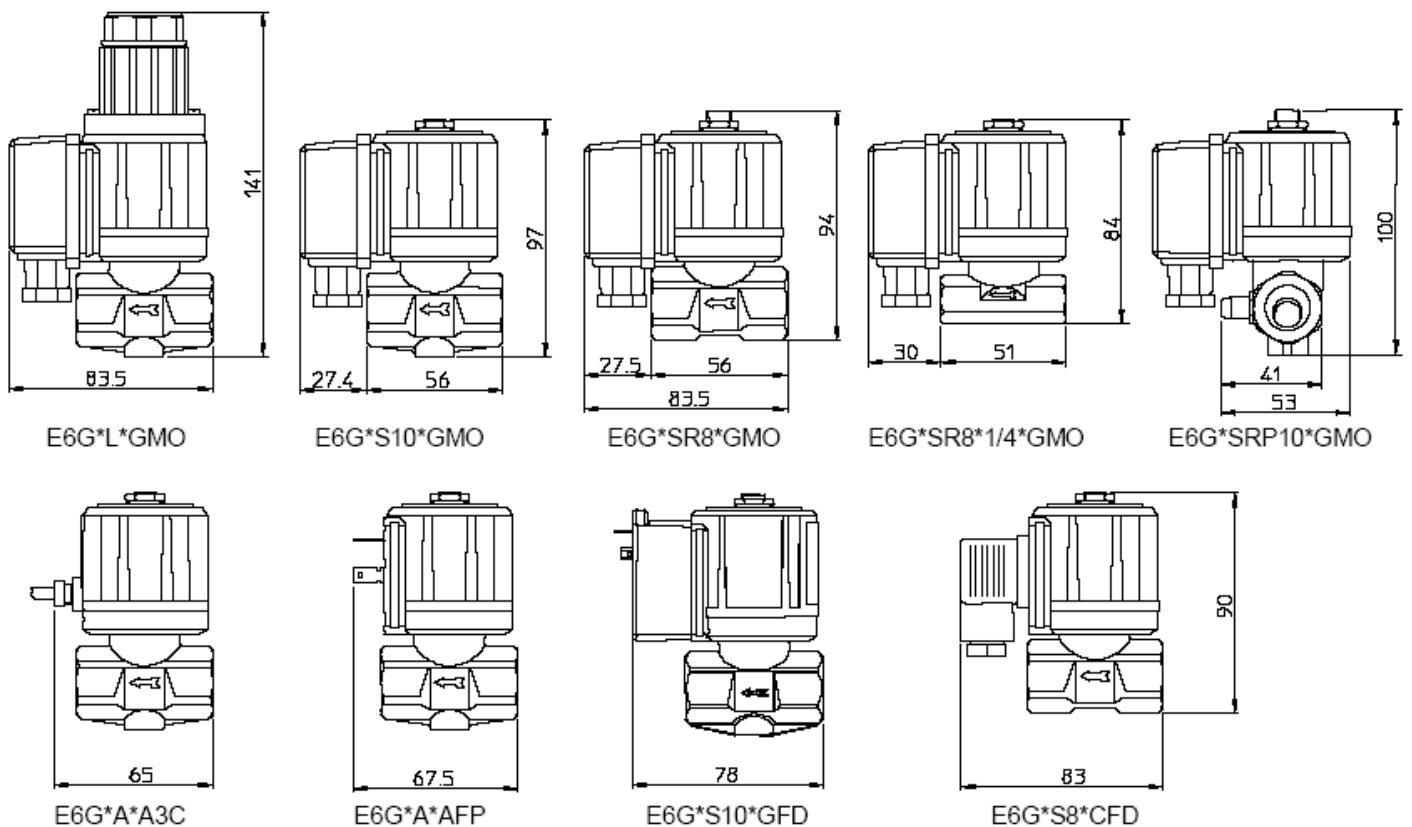

DIAGRAM

PRESSURE DROP
mbar

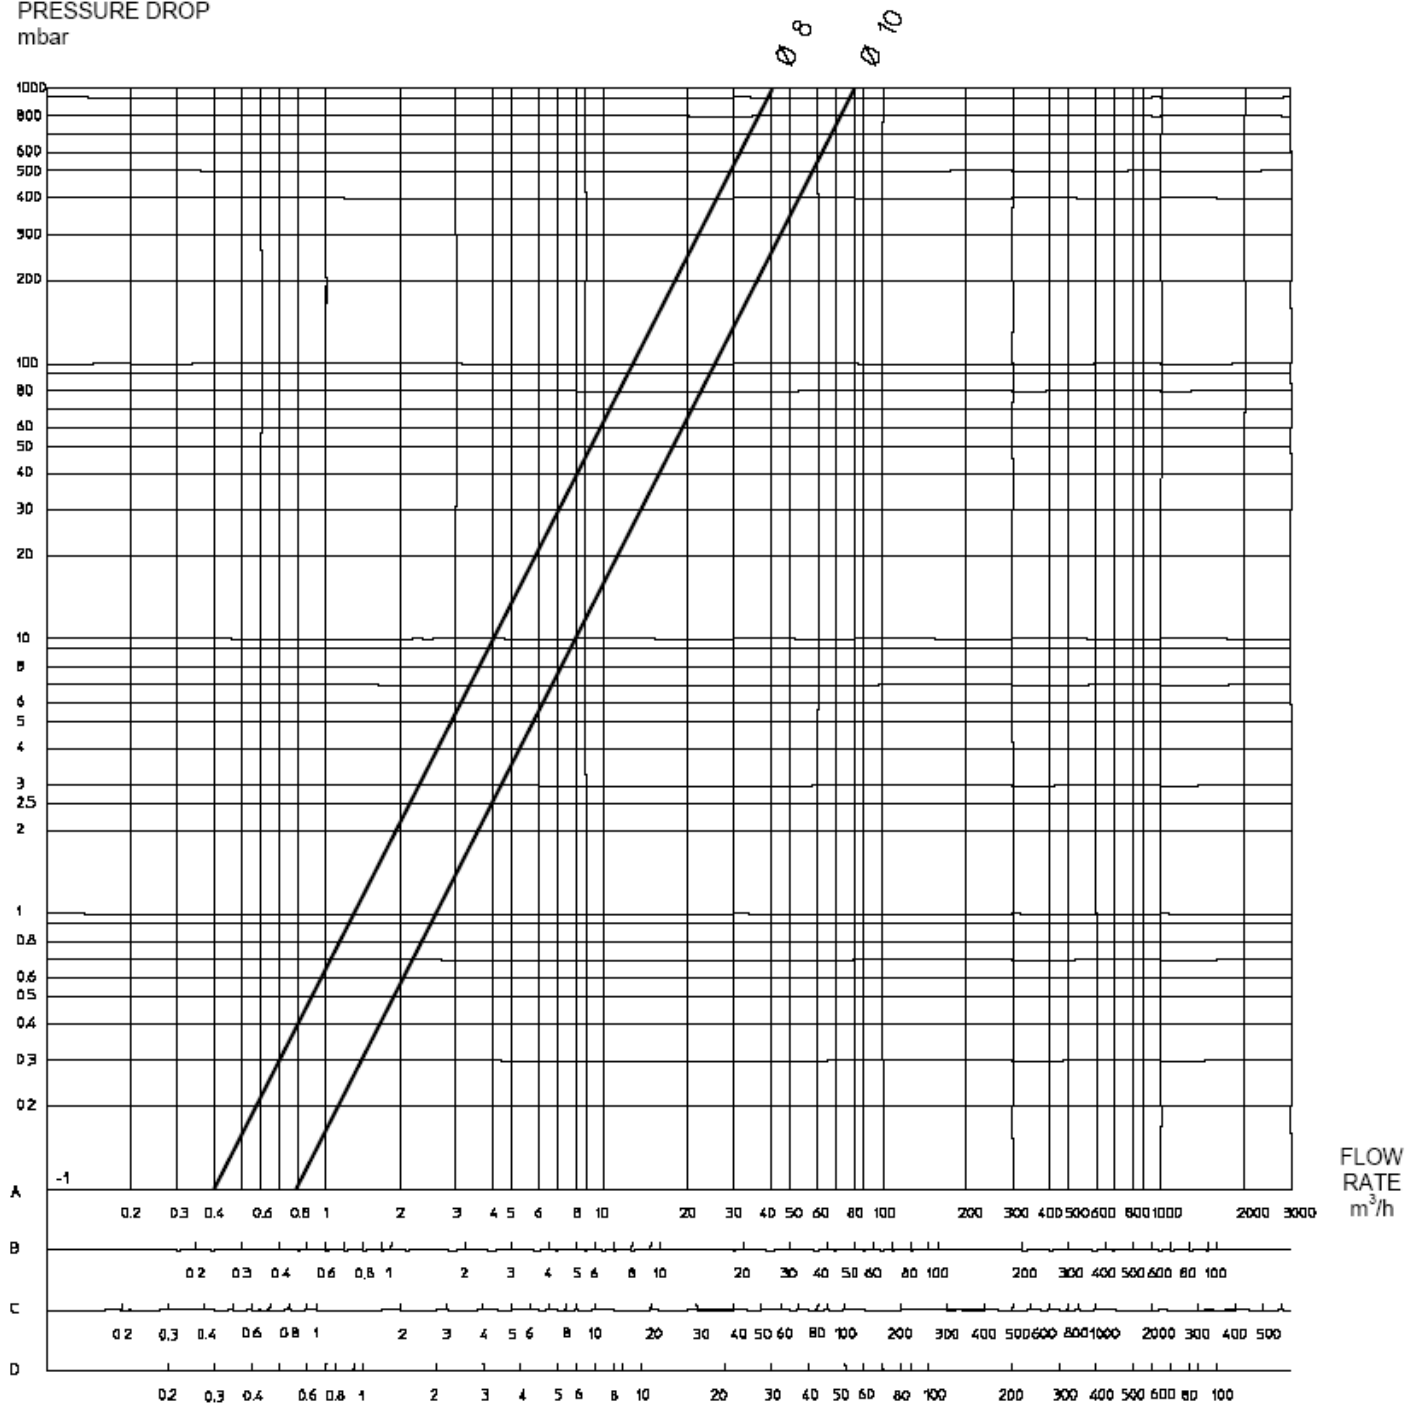

FLOW RATE
m³/h

- A : Standard flow rate m³/h of NATURAL GAS relative density 0.554
- B : Standard flow rate m³/h of LPG relative density 1.54
- C : Standard flow rate m³/h of TOWN GAS relative density 0.411
- D : Standard flow rate m³/h of AIR relative density 1

SUMMARY TABLE

| Type | Operating pressure (mbar) | Orifice diameter (mm) | Connections | Weight (g) | Coil | Consumption (VA) 230Vac | Consumption (VA) 110Vac | Flow (m³/h) gas with ΔP2.5mbar | Possibility to fit pressure test point |
|----------|---------------------------|-----------------------|-------------|------------|----------|-------------------------|-------------------------|--------------------------------|--|
| E6G*S10 | 0 ÷ 500 | 10 | G3/8" | 760 | BE6*G.. | 20 | 18 | 3.9 | Yes |
| E6G*S10 | 0 ÷ 500 | 10 | G1/2" | 730 | BE6*G.. | 20 | 18 | 3.9 | Yes |
| E6G*S10 | 0 ÷ 500 | 10 | G3/8" | 740 | BE6*CFD | 20 | 18 | 3.9 | Yes |
| E6G*S10 | 0 ÷ 500 | 10 | G1/2" | 710 | BE6*CFD | 20 | 18 | 3.9 | Yes |
| E6G*SR10 | 0 ÷ 500 | 10 | G3/8" | 765 | BE6*G.. | 20 | 18 | 3.9 | Yes |
| E6G*SR10 | 0 ÷ 500 | 10 | G1/2" | 735 | BE6*G.. | 20 | 18 | 3.9 | Yes |
| E6G*SR10 | 0 ÷ 500 | 10 | G3/8" | 745 | BE6*CFD | 20 | 18 | 3.9 | Yes |
| E6G*SR10 | 0 ÷ 500 | 10 | G1/2" | 715 | BE6*CFD | 20 | 18 | 3.9 | Yes |
| E6G*L | 0 ÷ 200 | 10 | G3/8" | 865 | BE6*G.. | 20 | 18 | 3.9 | Yes |
| E6G*L | 0 ÷ 200 | 10 | G1/2" | 835 | BE6*G.. | 20 | 18 | 3.9 | Yes |
| E6G*S8 | 0 ÷ 1000 | 8 | G1/4" | 620 | BE6*G..C | 20 | 18 | 2 | No |
| E6G*S8 | 0 ÷ 500 | 8 | G3/8" | 725 | BE6*G..C | 20 | 18 | 2 | Yes |
| E6G*S8 | 0 ÷ 500 | 8 | G1/2" | 695 | BE6*G..C | 20 | 18 | 2 | Yes |
| E6G*S8 | 0 ÷ 1000 | 8 | G1/4" | 640 | BE6*G.. | 20 | 18 | 2 | No |
| E6G*S8 | 0 ÷ 1000 | 8 | G3/8" | 745 | BE6*G.. | 20 | 18 | 2 | Yes |
| E6G*S8 | 0 ÷ 1000 | 8 | G1/2" | 715 | BE6*G.. | 20 | 18 | 2 | Yes |
| E6G*S8 | 0 ÷ 1000 | 8 | G1/4" | 620 | BE6*CFD | 20 | 18 | 2 | No |
| E6G*S8 | 0 ÷ 1000 | 8 | G3/8" | 725 | BE6*CFD | 20 | 18 | 2 | Yes |
| E6G*S8 | 0 ÷ 1000 | 8 | G1/2" | 695 | BE6*CFD | 20 | 18 | 2 | Yes |
| E6G*SR8 | 0 ÷ 1000 | 8 | G1/4" | 625 | BE6*G..C | 20 | 18 | 2 | No |
| E6G*SR8 | 0 ÷ 500 | 8 | G3/8" | 730 | BE6*G..C | 20 | 18 | 2 | Yes |
| E6G*SR8 | 0 ÷ 500 | 8 | G1/2" | 700 | BE6*G..C | 20 | 18 | 2 | Yes |
| E6G*SR8 | 0 ÷ 1000 | 8 | G1/4" | 645 | BE6*G.. | 20 | 18 | 2 | No |
| E6G*SR8 | 0 ÷ 1000 | 8 | G3/8" | 750 | BE6*G.. | 20 | 18 | 2 | Yes |
| E6G*SR8 | 0 ÷ 1000 | 8 | G1/2" | 720 | BE6*G.. | 20 | 18 | 2 | Yes |
| E6G*SR8 | 0 ÷ 1000 | 8 | G1/4" | 625 | BE6*CFD | 20 | 18 | 2 | No |
| E6G*SR8 | 0 ÷ 1000 | 8 | G3/8" | 730 | BE6*CFD | 20 | 18 | 2 | Yes |
| E6G*SR8 | 0 ÷ 1000 | 8 | G1/2" | 700 | BE6*CFD | 20 | 18 | 2 | Yes |
| E6G*A10 | 0 ÷ 950 | 10 | G3/8" | 675 | BE6*A3C | 20 | 18 | 3.9 | Yes |
| E6G*A10 | 0 ÷ 950 | 10 | G1/2" | 645 | BE6*A3C | 20 | 18 | 3.9 | Yes |
| E6G*A10 | 0 ÷ 950 | 10 | G3/8" | 695 | BE6*AFD | 20 | 18 | 3.9 | Yes |
| E6G*A10 | 0 ÷ 950 | 10 | G1/2" | 665 | BE6*AFD | 20 | 18 | 3.9 | Yes |

TYPE REFERENCE

E6G * S R P 10*1/2 * G FD 7 230/50-60

Type _____

Opening type (fast/slow) _____

| Type | Description |
|------|--|
| A | Fast opening valve. (For body with 10 mm orifice only) |
| S | Fast, silent opening valve. |
| L | Slow, silent opening valve (this version is inclusive of flow adjuster). (For body with 10 mm orifice only) |

Flow adjustment _____

Valve fitted with equipment for flow adjustment.

Pressure plug _____

Valve inclusive of pressure plug with G1/4" connections.

Body Type _____

| Type | Connections | Orifice |
|--------|-------------|---------|
| 8*1/4 | G1/4" | 8 mm |
| 8*3/8 | G3/8" | 8 mm |
| 8*1/2 | G1/2" | 8 mm |
| 10*3/8 | G3/8" | 10 mm |
| 10*1/2 | G1/2" | 10 mm |

Supply voltage

| Type | Description |
|-----------|--------------------|
| 110/50-60 | 110 Vac / 50-60 Hz |
| 230/50-60 | 230 Vac / 50-60 Hz |

Test pressure point position

| Type | Position |
|------|--------------|
| 5 | Outlet left |
| 6 | Outlet right |
| 7 | Inlet left |
| 8 | Inlet right |

Connection type

| Type | Description |
|------|--|
| 2C | Connection with two core cable-IP65. |
| 3C | Connection with three core cable- IP65. |
| FP | Connection with flat fast-on. |
| FD | Connection with fast-on for plug DIN43650-IP65 (GFD IP40). |
| MO | Connection with terminal board-IP54. |
| MOC | Connection with terminal board (short conveyors)-IP54. |

Winding type

| Type | Description |
|------|---|
| A | Supply in alternate current. |
| C | Supply in direct current. |
| G | Supply in alternate current, but valve operates in direct current thanks to an embodied rectification bridge. (For "MO", "MOC" and "FD" connection versions only) |

System Gaz dystrybutor Brahma Spa. w Polsce
 Polska 04-549 Warszawa, Korkowa 167, tel.fax. +480 22 812-05-04
 sprzedaż wysyłkowa [http:// www.systemgaz.com.pl](http://www.systemgaz.com.pl)
 e-mail: systemgaz@hoga.pl